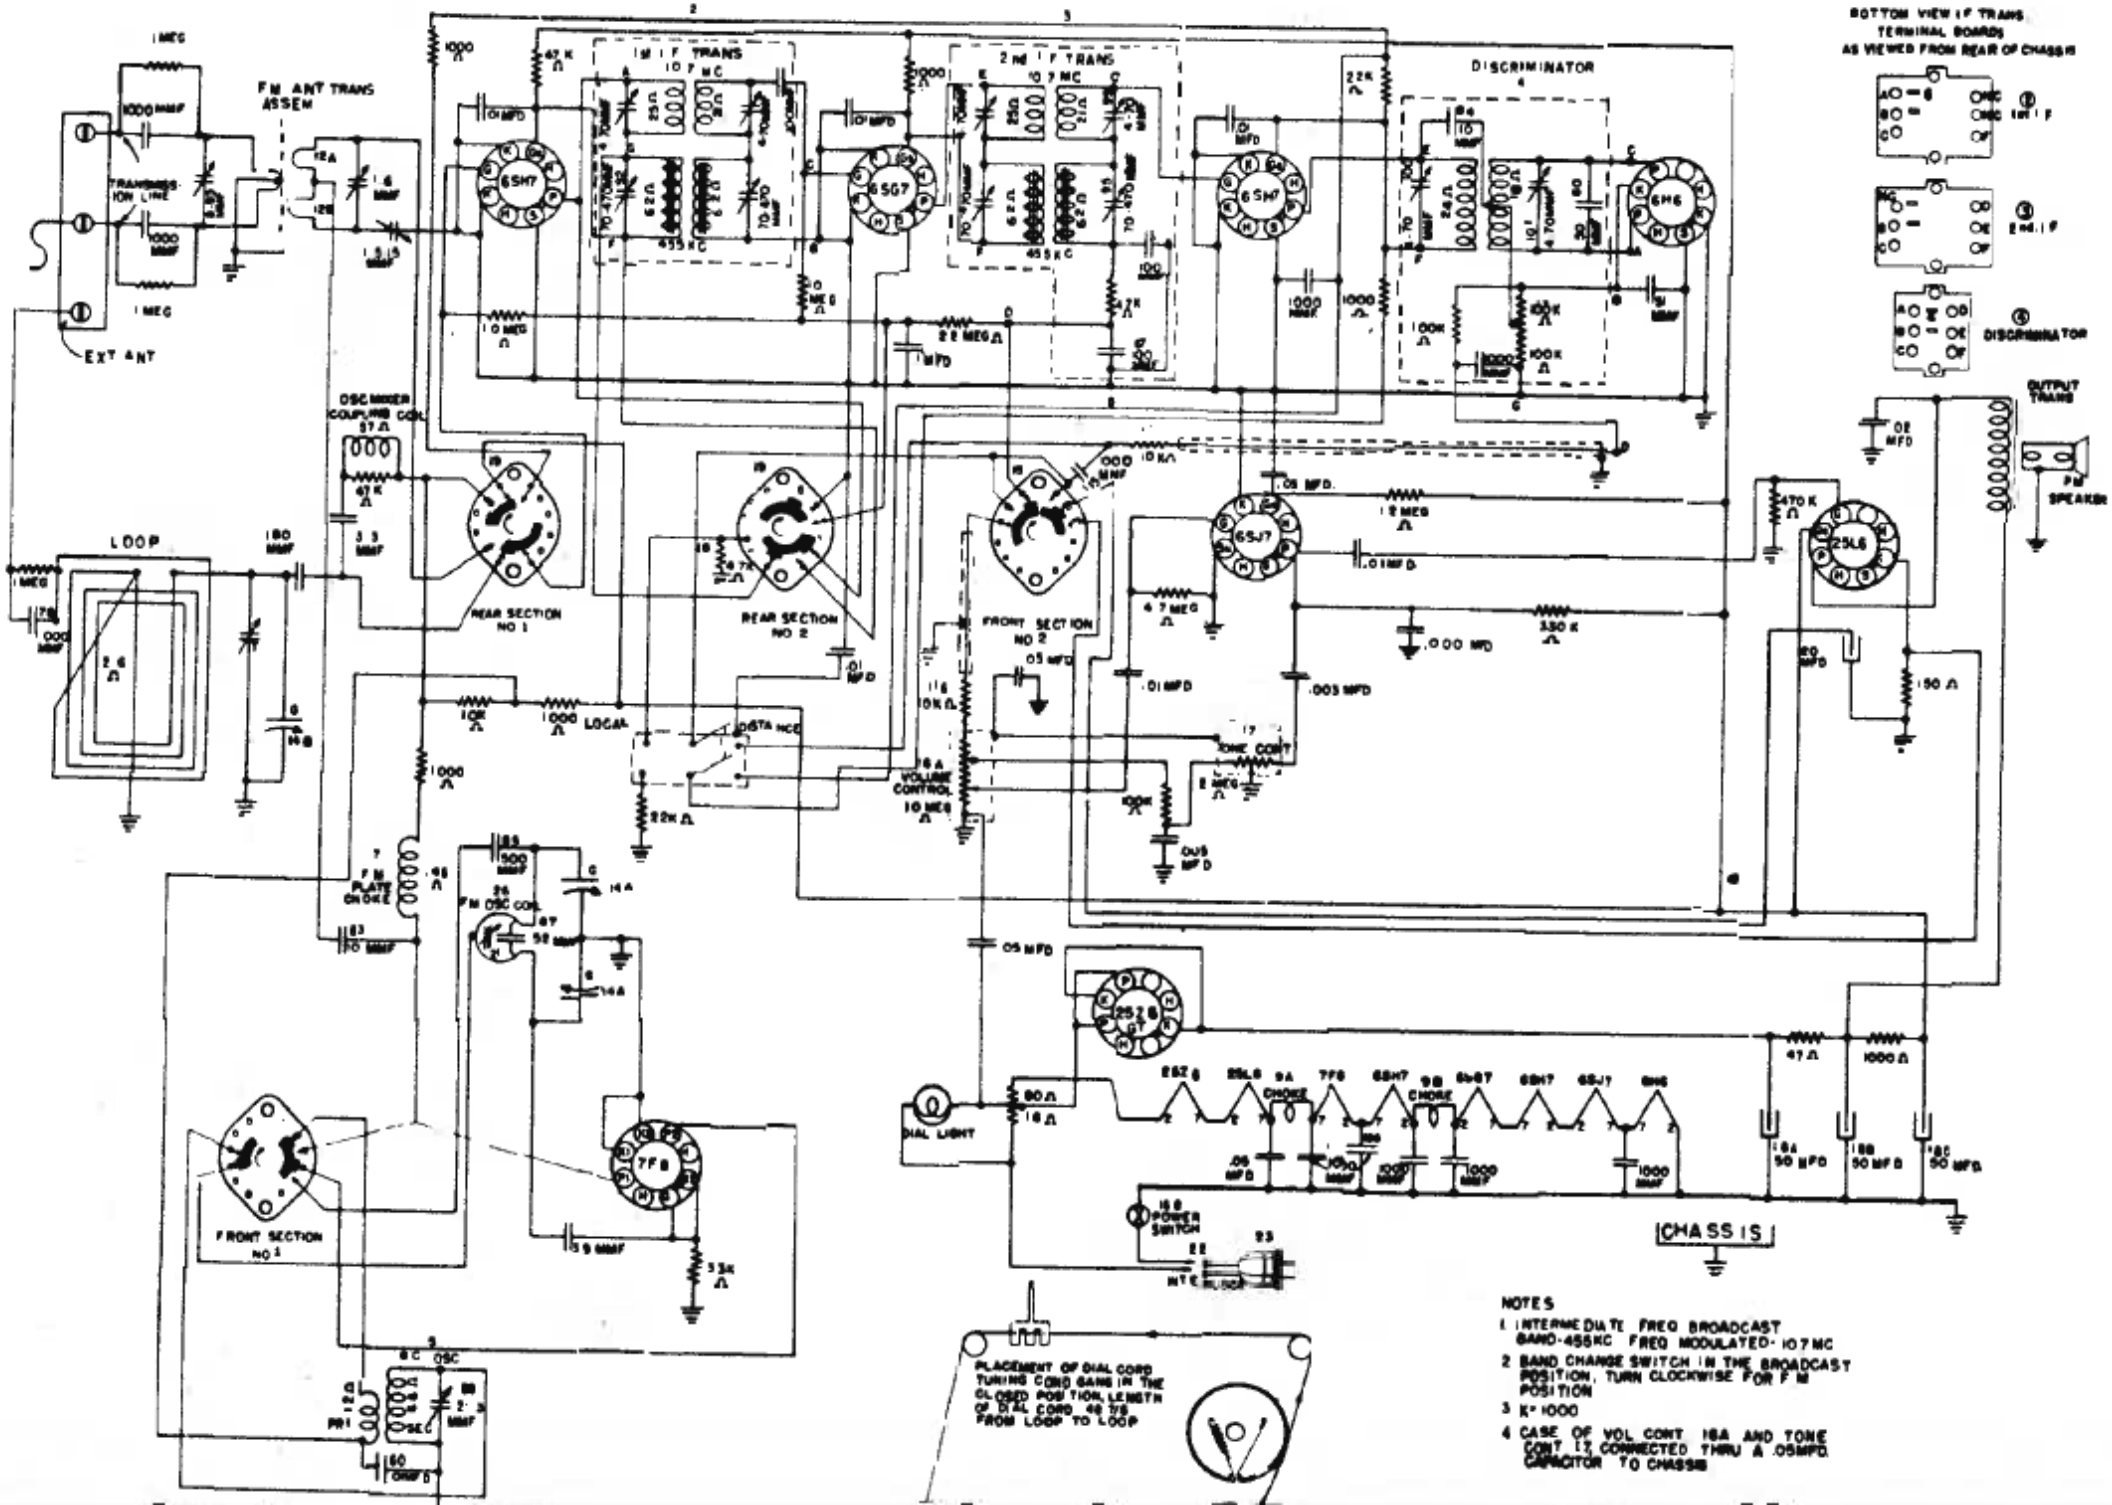
BOTTOM VIEW I F TRANS TERMINAL BOARDS AS VIEWED FROM REAR OF CHASSIS
① 1ST I F
② 2ND I F
③ DISCRIMINATOR
1ST I F TRANS 10.7 MC
2ND I F TRANS 10.7 MC
DISCRIMINATOR
FM ANT TRANS ASSEM
EXT ANT
LOOP
OSC MIXER COUPLING COIL
REAR SECTION NO 1
REAR SECTION NO 2
FRONT SECTION NO 2
FRONT SECTION NO 1
LOCAL
DISTANCE
VOLUME CONTROL 10 MEG
TONE CONT
FM PLATE CHOKE
FM OSC COIL
OSC
DIAL LIGHT
POWER SWITCH
OUTPUT TRANS
PM SPEAKER
CHASSIS
6SH7
6SG7
6SH7
6H6
6SJ7
2A6
25Z6
7F8
6SA7
6SH7
6SJ7
6H6
PLACEMENT OF DIAL CORD TURNING CORD GANG IN THE CLOSED POSITION, LENGTH OF DIAL CORD 48 7/8 FROM LOOP TO LOOP
NOTES
1 INTERMEDIATE FREQ BROADCAST BAND-455KC FREQ MODULATED- 10.7 MC
2 BAND CHANGE SWITCH IN THE BROADCAST POSITION, TURN CLOCKWISE FOR F M POSITION
3 K= 1000
4 CASE OF VOL CONT 18A AND TONE CONT 17 CONNECTED THRU A .05MFD CAPACITOR TO CHASSIS